


Drill Guide Suggestion (Top Mount)

125b- Untested!

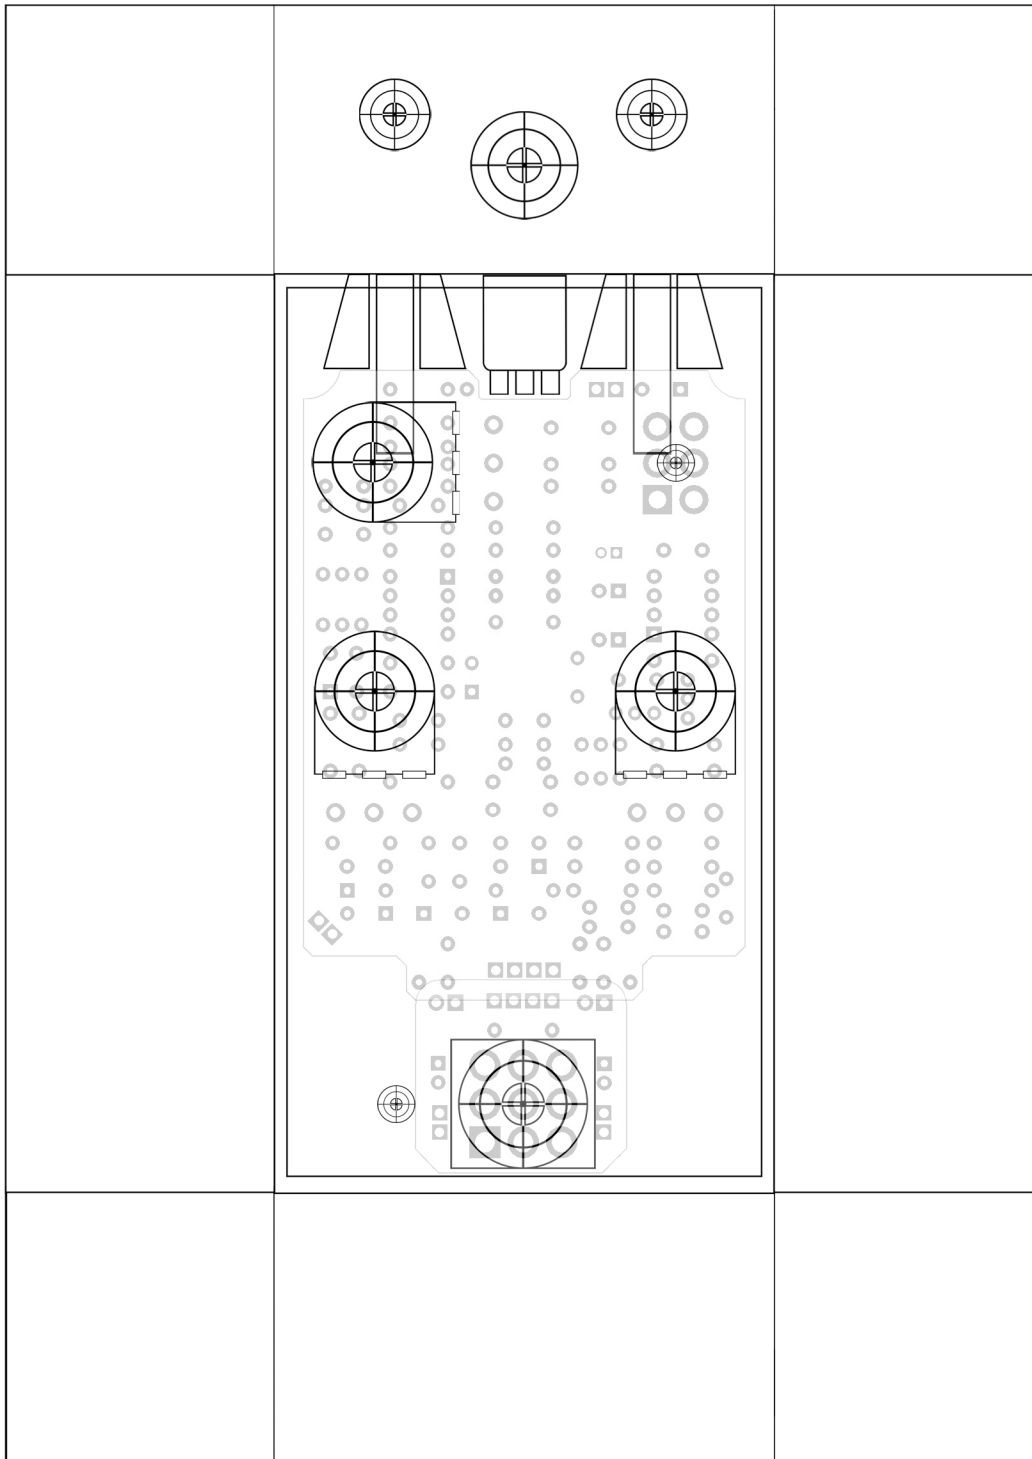

Stomp switch shown with optional 3pdt pcb from lectric-fx

When using top mount jacks with the 3pdt pcb you may need to install D1 and C15 on the backside.